

Use of tie down strap Instructions

Iss 1

Contact

Phone 01394 420541

E mail Info@atlas-yachtcradles.co.uk




10 m 5 tonne tie down strap.



Ideally the strap should be attached to a strong ground anchor point.

If the strap is being attached to the cradle hook on to the leg bottom as shown.

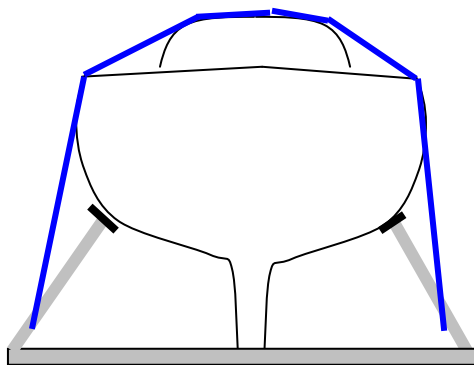

6 leg cradles can have one central strap attached to the centre legs.

For extreme conditions 3 straps can be used on a 6 leg cradle, each pair legs.

4 leg cradles must have two straps.

When ground anchor points are used any number of straps can be used.

Do Not attach a strap to a ground anchor one side and the cradle the other.

